

JETPAGE PAGER
One Year Limited Warranty

This One Year Limited Warranty issued by JETWORLD, INC., covers the JETPAGE PAGER

This warranty applies solely to the original purchaser for a period of one (1) year from the date of purchase. During the warranty period JETWORLD, INC. will repair or replace the JETPAGE PAGER if it is determined by JETWORLD, INC. to be defective in material or workmanship. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, improper services, or other causes not arising out of defects in material or workmanship.

During the warranty period, and upon proof of purchase, the defective product will, at JETWORLD's option, be either repaired or replace. Repair, at Jetworld's option, may include the replacement of parts or boards with new or functionally equivalent reconditioned parts or boards. Replaced parts and boards are warranted for the balance of the original warranty period. All parts and boards removed in the replacement process shall become the property of Jetworld. Except for the postage and insurance requirements, no charge will be made for such repair or replacement. Any unit sent without proof of purchase will not be serviced free of charge, instead such unit will be serviced at the current repair rate and returned C.O.D.

This warranty is valid only within the contiguous 48 states. JETWORLD, INC. will honor this warranty outside this area provided that all shipping, insurance and related charges involved in transporting the product to and from JETWORLD's premises shall be paid by the purchaser.

ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE ONE YEAR PERIOD. JETWORLD, INC. SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER INCIDENTAL OR CONSEQUENTIAL COSTS, EXPENSES OR DAMAGE INCURRED BY THE PURCHASER OR ANY OTHER USER. THIS WARRANTY CONTAINS THE ENTIRE OBLIGATION OF JETWORLD, INC. Some states do not allow the exclusion or limitation of implied warranties or consequential damages, so the above limitation or exclusions may not apply to you.

JETWORLD, INC.
2547 Strozier Ave
South El Monte, CA 91733
Service Department (626) 448-1865

Jetpage















Models: **JP-420**

USER MANUAL


FEATURES AND FUNCTIONS

- Ultra Compact Size
- 20 Alerts, Silent (Vibration), Beep
- Display Time, Date, and Day of the Week
- Display Numbers of Unread Message(s)
- 18 Message Memory
- Lock up to 10 Messages
- Delete Individual or All Messages
- Message Time Stamping
- Stop Watch
- Duplicate Message Indicator
- 3 Alarm Settings
- Low Battery Indicator
- Service Area Indicator
- Backlight
- Musical Caller ID

PAGER SYMBOLS

-  Numbers of Messages Stored
-  Services Area Indicator
-  Standard Beep
-  Silent (Vibration)
-  Music Alert
-  Alarm Clock
-  Auto On/Off
-  Low Battery Indicator
-  Locked Message
-  Delete Message Indicator
-  Duplicate Message Indicator
-  FULL Message Full
-  Message Continuation
-  Day of the Week (1=Mon, 2=Tue, 3=Wed, 4=Thu, 5=Fri, 6=Sat, 7=Sun)

Operating Your Pager

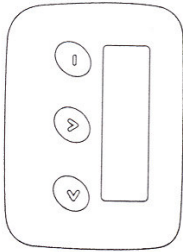

Mode Setting

1. "-" left key
<Mode/Correct>
2. "^" middle key
<Confirm/Shift/Lights>
3. "v" right key
<Confirm/On/Read>

STANDBY MODE

Standby mode is the home screen of the pager. It displays the time, date, and day of the week.

TURNING PAGER ON/OFF

From standby screen, press and hold the "-" and "^" key simultaneously until the pager screen read "OFF".

To turn the pager back on, press and hold the "-" key until the pager alerts.

READ MESSAGE

- ① Press any key to stop alert.
- ② Press ">" to read message.
- ③ Press ">" to view the next screen.

4

LOCK/UNLOCK/DELETE INDIVIDUAL MESSAGE

- ① Press ">" to select the message you want to lock, unlock, or delete.
- ② Press "v" to lock, unlock, or delete message.
- ③ Press ">" to confirm your selection.

BACKLIGHT

To turn on or off the backlight press "-"
The backlight will automatically turn off after a couple of seconds.

MODE SETTING

- ① Press "v" until the screen displays "SET MODE".
- ② Press ">" to select "SET MODE".
- ③ Press "v" to select "SILENT" or "AUDIO".
- ④ Press ">" to confirm your selection.

5

SET SOUND (Music Setting)

- ① Press "v" until the screen displays "SET SOUND".
- ② Press ">" to select "SET SOUND".
- ③ Press "v" to select alert sound.
- ④ Press ">" to confirm your selection.

DELETE ALL MESSAGES

- ① Press "v" until the screen displays "DELETE ALL".
- ② Then press ">" to delete all the unlocked messages.

ALARM CLOCK/REMINDER SETTING

Alarm Clock Setting

- ① Press "v" until the screen displays "SET ALARM".
- ② Press ">" to select alarm setting.
- ③ Now the screen should display "8:00A OFF".

6

- ④ Press "A" to choose the 1st or 2nd set of alarm.
- ⑤ Press ">" to confirm your selection.
- ⑥ Press ">" to move the cursor and press "A" to adjust the time and alarm on/off.
- ⑦ Press ">" until standby screen appears.

Reminder Alarm Setting

The reminder alarm (3rd alarm) lets you set a time interval (between 1 minute to 59 minutes) at which the reminder alarm will alert.

- ① According to above ways to choose the 3rd set of alarm.
- ② Press ">" to enter the reminder alarm.
- ③ Press "A" to select how many times the reminder alarm will alert (r0 stands for timeless and r1-r9 stands for 1 time to 9 times) and press ">" to confirm it.
- ④ Press ">" to move the cursor and press "A" to adjust the time and alarm on/off.
- ⑤ Press ">" until standby screen appears.

7

AUTO ON/OFF SETTING

- ① Press "A" until the screen displays "SET AUTO".
- ② Press ">" and the screen will display "AUTO DISABLE"(off).
- ③ Press "A" to select "AUTO ENABLE"(on).
- ④ Press ">" to set time.
- ⑤ Press "A" to adjust the time and press ">" to move cursor.
- ⑥ Press ">" until standby screen appears.

NOTE: This feature will turn your pager on and off according to the time that is set.

Pages will not be received while this feature is in use.

TIME/DATE SETTING

- ① Press "A" until the screen displays "SET TIME".

8

- ② Press ">" to select "SET TIME".
- ③ Press ">" to move the cursor and press "A" to adjust the time.
- ④ Press ">" until standby screen appears.

SET LCMMSG (Musical Caller ID)

This feature allows you to know who is paging with an identifying alert.

- ① Press "A" until the screen will displays "SET LCMMSG".
- ② Press ">" to select "SET LC MSG". The screen should display "LC1-----".
- ③ Press "A" to select 1st or 2nd LC message
- ④ Press ">" to move the cursor and "A" to change the value of the digits. (the first 9 digit is for the incoming number, and the music you set on the "SET SOUND" mode for the LC1 or LC2 will alert. Press "-" to move cursor backward during the process.
- ⑤ Press ">" until the standby screen appears.

9

STOPWATCH

- ① Press "A" until the screen displays "STOPWATCH".
- ② Press ">" to select "STOPWATCH".
- ③ Press "A" to start timer.
- ④ Press "A" again to stop timer.

10