

JETPAGE PAGER
One Year Limited Warranty

This One Year Limited Warranty issued by JETWORLD, INC., covers the JETPAGE PAGER.

This warranty applies solely to the original purchaser for a period of one (1) year from the date of purchase. During the warranty period JETWORLD, INC. will repair or replace the JETPAGE PAGER if it is determined by JETWORLD, INC. to be defective in material or workmanship. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, improper services, or other causes not arising out of defects in material or workmanship.

During the warranty period, and upon proof of purchase, the defective product will, at JETWORLD's option, be either repaired or replaced. Repair, at Jetworld's option, may include the replacement of parts or boards with new or functionally equivalent reconditioned parts or boards. Replaced parts and boards are warranted for the balance of the original warranty period. All parts and boards removed in the replacement process shall become the property of Jetworld. Except for the postage and insurance requirements, no charge will be made for such repair or replacement. Any unit sent without proof of purchase will not be serviced free of charge, instead such unit will be serviced at the current repair rate and returned C.O.D.

This warranty is valid only within the contiguous 48 states. JETWORLD, INC. will honor this warranty outside this area provided that all shipping, insurance and related charges involved in transporting the product to and from JETWORLD's premises shall be paid by the purchaser.

ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE ONE YEAR PERIOD. JETWORLD, INC. SHALL NOT BE LIABLE FOR LOSS OF USE OR THE PRODUCT OR OTHER INCIDENTAL OR CONSEQUENTIAL COSTS, EXPENSES OR DAMAGE INCURRED BY THE PURCHASER OR ANY OTHER USER. THIS WARRANTY CONTAINS THE ENTIRE OBLIGATION OF JETWORLD, INC. Some states do not allow the exclusion or limitation of implied warranties or consequential damages, so the above limitation or exclusions may not apply to you.

JETWORLD, INC.
2547 Strouzer Ave.
South El Monte, CA 91732
Service Department (826) 448-1885

Jetpage

Jetpage

Models JP 900F, JP 950

USER MANUAL

P/N JP9908mj9fx - 1

USER'S MANUAL

Pager is Jetworld's newest and smallest pager. With many easy to use features that will help simplify your daily tasks.

Features and Functions

- 16 message memory
- 8 message protection
- 10 memory phone book
- 5 build-in alarm
- 60 pre-programmed alpha quick notes
- 14 selectable alerts (10 musical/4 tones)
- Silent (vibration)
- Sleep (no alert) - Private Sleep Time
- Time, date and day of week display
- Time and date stamping
- Individual message deleter/icon
- Easy to read dual back-lit display
- Saves messages when off and when changing the battery
- Musical ID

 
Indicator symbols

- Day of the week display (MON,TUE,WED,THU,FR,SAT,SUN)
- A,B,C,D, tone display, Receiving Messages indicator
- Silent (vibrate) mode indicator
- Tone alert mode indicator
- Audible alert mode indicator
- Sleep mode indicator
- Active alarm icon
- Time setting indicator
- Duplicate message indicator
- Directory icon
- Low-battery indicator
- Locked Message indicator

1

- Out of range indicator
- Message continuation indicator
- Individual message delete icon
- Protected message icon

Operating your pager



- "A" button (read button) - Use to turn on pager, read messages, and confirm time, date, and alarm settings.
- "B" button (mode button) - Use to scroll through and modify the pager's functions.
- "C" button (light button) - Used to activate the pager's back light, and confirm a specified selection.

Setting alert modes

The pager has 3 standard alert modes. You can select one mode among AUDIO (tone or music), silent (vibration), or sleep (no alert). When the pager is initially turned on, it is automatically set to an AUDIO alert. To change alert press the "B" button until "SET ALERT ?" is displayed on the screen, and press the "A" button. To select an alert

2

mode, press the "B" button, and press the "A" button to confirm. If AUDIO alert was selected, press the "B" button to select the melody, and press the "A" button to confirm your selection.

Turning your pager on and off

After inserting the battery, press the "A" button to turn on the pager. To turn off the pager, press the "B" button until the screen displays "OFF ?" then press the "C" button to confirm the selection. When the pager is turned off, the screen will display "OFF" along with the time.

Setting the time and date

To set the time and date, press the "B" button until "SET TIME ?" appears on the display, and press the "C" button. Use the "C" button to scroll through the day of the week, date, and time, while utilizing the "B" button to make any changes. Once completed, press the "A" button to confirm and return to the standby screen.

Setting the alarm

The pager comes with an alarm function that will make the pager alert at a specified time everyday whether the pager is on or off. There are 5 separate alarms that can be set for different times of the day. To set the alarm, press the "B" button until "SET ALARM ?" appears on the screen, then press the "C" button. Use the "C" button to scroll through the ON(Active) / OFF(Inactive), and alarm time while utilizing the "B" button to make any changes. Once completed, press the "A" button to confirm, and return to the standby screen.

Directory

The directory (with the ability to store up to 10 numbers) can be used as

3

an additional memory or as a phone book to store your important numbers. While reading a message, you can imprint a copy of the message into the directory. To do so press the "Select" button until a appears, and press the "Mode" button to imprint a copy into your directory (Please note that the directory can only store 12 digits per memory, and is unable to store alpha-numeric messages). To access your memory, press the "Select" button until "DIRECTORY" appears on the screen and press "Mode" button. Use the "Read" button to read through all your directory message. Messages stored in the directory can also be lock/unlock and individually erased.

Receiving message

When a message is received, the pager will notify you with the selected alert, and the screen will display "1" page." If the message is unread, the pager will give a reminder notification with the selected alert every two minutes. If the pager receives more than 16 pages, the screen will display "MEMORY FULL." When there are over 16 unread messages, the next incoming message will delete the first message. On the next incoming message, the screen will display "PAGE OVER." The next incoming message will delete the first unread message. If the pager has traveled out of the service area, the out-of-range indicator will display. If the pager receives a message with a possible error, the message will end with an "E."

Reading message

Button "A" allows you to read the message. If there is a continuous message, the indicator will display on the upper right side of the screen. Pressing the "A" button again will allow you to read the continuous message. If a duplicate message is received, will appear on the screen.

4

Locking and Unlocking your message

Locking can help prevent the accidental deletion of a message. The pager can lock up to 8 messages. To lock a message, press the "B" button until the (lock icon) appears at the top of the screen. If it is full "HOLD FULL" will display on the screen. To unlock a message, press the "B" button.

Back light

Pager is supported by a dual back light. When needed, it can be activated by pressing the "C" button. The light will either automatically shut off in 20 seconds if there is no activity, or press the "C" button again to turn the light off.

Deleting individual messages

To delete an individual message press the "A" button until the selected message appears on the screen. Press the "B" button until a icon appears at the top of the screen, and press the "C" button to confirm.

Deleting all the messages

To delete all (unlocked) messages, press the "B" button until "CLEAR ALL ?" appears on the screen, then press the "C" button to confirm.

5