

## JETPAGE PAGER One Year Limited Warranty

The One Year Limited Warranty issued by JETWORLD, INC. covers the JETPAGE PAGER. The warranty applies solely to the original purchaser for a period of one (1) year from the date of purchase. During the warranty period JETWORLD, INC. will repair or replace the JETPAGE PAGER if it is determined by JETWORLD, INC. to be defective in material or workmanship. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, improper services, or other causes not arising out of defects in material or workmanship.

During the warranty period, and upon proof of purchase, the defective product will, at JETWORLD's option, be either repaired or replaced. Repair, at Jetworld's option, may include the replacement of parts or boards with new or functionally equivalent reconditioned parts or boards. Replaced parts and boards are warranted for the balance of the original warranty period. All parts and boards removed in the replacement process shall become the property of Jetworld. Except for the postage and insurance requirements, no charge will be made for such repair or replacement. Any unit sent without proof of purchase will not be serviced free of charge, instead such unit will be serviced at the current repair rate and returned C.O.D.

This warranty is valid only within the contiguous 48 states. JETWORLD, INC. will honor this warranty outside this area provided that all shipping, insurance and related charges involved in transporting the product to and from JETWORLD's premises shall be paid by the purchaser.

ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE ONE YEAR PERIOD. JETWORLD, INC. SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER INCIDENTAL OR CONSEQUENTIAL COSTS, EXPENSES OR DAMAGE INCURRED BY THE PURCHASER OR ANY OTHER USER. THIS WARRANTY CONTAINS THE ENTIRE OBLIGATION OF JETWORLD, INC. Some states do not allow the exclusion or limitation of implied warranties or consequential damages, so the above limitation or exclusions may not apply to you.

JETWORLD, INC.  
25475 Sycamore Ave.  
South El Monte, CA 91733  
Service Department(626) 448-1865

 
# Jetpage Model JP 880 / JP 800FX / JP 880FM / JP 800FMFX

## USER MANUAL

 
### Features and Functions

- ✓ Compact Size
- ✓ 16 Sets of Memories
- ✓ 8 Message Protection
- ✓ 10 Memory Phone Book
- ✓ 3 Alarm Settings
- ✓ 40 Built In Alpha Mess
- ✓ Service Area Indicator
- ✓ Selectable 10 Melodies/4 Beep Tones/Vibration/Sleep Alerts
- ✓ Date and Clock Display
- ✓ Date and Time Stamp
- ✓ Alarm Function
- ✓ Selective Message Delete
- ✓ Delete All
- ✓ Memory Full Indication

### Control Buttons

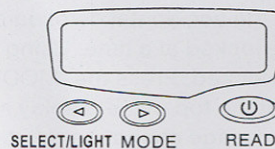

Model  
JP 880  
JP 800FX

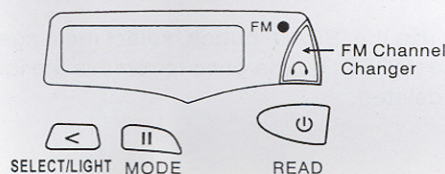

Model  
JP 880FM  
JP 800FMFX

- |                           |                                 |
|---------------------------|---------------------------------|
| <b>SU</b> Day of the Week | Duplicate Message               |
| <b>08</b> Message Number  | Low Battery Alert               |
| Time Set Indicator        | Message Lock                    |
| Beep Alert                | Message Continued               |
| Vibrate or Sleep Alert    | Out of Service Area             |
| Music Alert               | Delete Message                  |
| Alarm                     | <b>AB</b> A.B.C.D. Tone Display |
| Telephone Directory       |                                 |

### POWER ON/OFF

Press and release the "READ" button. The pager alerts as it powers up. Now the pager is on standby.

Press "MODE," button until "OFF?" appears in the LCD window, Then press the "SELECT," button, when the pager is off, time and alarm functions work normally, and all messages received prior to turning the unit off will remain in memory.

### SET ALERT MODE

The Jetpage pager has 3 standard alert modes. You can select one mode among audio (beep or music), vibration or sleep ( no alert ) with the "MODE," button while the pager is on.

### AUDIBLE ALERTING

When the pager is initially turned on, it is automatically set to an AUDIO alert. To change this alert to another beep or melody, press the "MODE," button until "SET ALERT?" is displayed on the LCD. Press the "SELECT," button once and the pager displays AUDIO? Choices include MUSIC melodies 1-10 and Beep alerts 1 - 4, Press the "SELECT," button again and the pager will display the current alert choice, By pressing the "MODE," button, you can scan the 10 music melodies and 4 beep alerts. Choose the desired alert by pressing the "READ," button.

### VIBRATION and SLEEP ALERTS

A VIBRATION alert will silently alert you when receiving pages, while a SLEEP alert emits no alert at all when receiving pages. To set, press the "MODE," button until "SET ALERT?" is display Press the "SELECT," button once, then the "MODE," button until the pager displays "SILENT?" or "SLEEP?" is displayed. When you make your selection, press the "READ" button.

## MESSAGES

When a message is received, the pager displays 1 PAGE on the LCD and depending on the alert mode selected :

BEEP	Emits a 16 second beep alert
MUSIC	Melody plays twice
VIBRATION	8 second vibration
SLEEP	No alert.

To stop any alert, press any button.


## REMINDER ALERTS

If no button is pressed after a message is received, a reminder alert will emit every 2 minutes (except Sleep mode).

## TO READ A MESSAGE

Press the "READ" button to read a message. If the message is continued, the mark displays. ▶ To read forward press the "READ" button again. The date and time of each message is stamped on each message received.

## LOCKING

Locking a message can help prevent the accidental deletion of a message. Up to 8 messages can be locked at a time. Using the "READ" button, select message to be locked. Press the "MODE" button until the lock icon  appears at the top of the display, and press the "SELECT" button. Locked message cannot be deleted unless unlocked.

## UNLOCKING

To unlock a message: use the "READ" button, select message to be unlocked. Press the "MODE" button once to remove the lock. Message can now be deleted.

## TO SET TIME AND DATE

Press the "READ," button until "SET TIME?" appears on the LCD. Press the "SELECT" button once.

1. Use the "MODE" button to pick the current day-of-the-week. The 2 character letters appear in the top left of the display.  
E.g.. SU=Sunday MO=Monday etc.  
Press the "SELECT" button once
2. Press the "MODE" button to choose the Month.  
E.g.. 5=May 6=June etc.  
Press the "SELECT" button once
3. Press the "MODE" button to choose the day-of-the-Month.  
Press the "SELECT" button once
4. Repeat for Hour. Minute and A for AM or P for PM  
When complete, press the "READ," button to exit.

## MUSICAL CALLER ID

The Jetpage pager is built with a feature called musical caller ID. With this feature callers can be identify before reading the page. This pager contains 10 sets of musical IDs. To utilize this feature, dial the pager number, wait for the greeting, and dial the 9\* followed by the musical ID code (0-9). You will be alerted with musical alert according to the number dialed. This feature cannot be utilized along with Jet messages.

## FM RADIO FEATURE (for FM models only)


To utilize your FM radio, simply insert the earphones into the slot provided. Once the red light is illuminated you can start tuning the radio to the desired station. The radio tuner has auto scan capabilities (automatically searches for next available station). The FM radio function and the paging function are operated on 2 separate bandwidths so utilizing one will not cause interference to the other.

- Please note using the FM radio will dramatically decrease battery life: for best paging reception please always change your battery whenever the low-battery indicator appears.

 
## LCD BACKLIGHT

When needed, a back-light can be activated by pressing the "SELECT," button. The light can be turned off by pressing the "SELECT," button, otherwise it will automatically shut off in after 20 seconds of no activity.


## DUPLICATE MESSAGE INDICATOR

Messages received more than once will be mated with 

## DIRECTORY

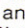The directory(with the ability to store up to 10 numbers) can be used as an additional memory or as a phone book to store your important numbers. While reading a message, you can make a photocopy of the message into the directory. To do so press the "SELECT" button until  appears, and press the "MODE" button to imprint a copy into your directory. (Please note that the directory can only store 12 digits per memory, and is unable to store alpha-numeric messages). To access you memory, press the "SELECT" button until "DIRECTORY" appears on the screen. Press the "MODE" button, and use the "READ" button to read through the numbers in your phone directory. Messages stored in the directory can also be lock/unlock and individually erased.

## TO ERASE ONE MESSAGE

Using the "READ" button, select message to be deleted. Press the MODE button until a scissors icon  appears at the top of the LCD. Then press the "SELECT" button. To delete message.

## TO ERASE ALL

In standby mode while not viewing messages, press the "MODE" button until the words "CLEAR ALL?" appears on the display. Press the "SELECT" button once to delete all unlocked messages.

## ALARM

The Jetpage pager comes with an alarm function that will make the pager alert at a specified time everyday whether the pager is on or off, There are 3 separate alarms that can be set for different times of the day.

## TO TURN ALARM ON/OFF

When the pager is initially turn on, press the "MODE," button until "SET ALARM," appears on the LCD. Press the "SELECT," button once to enter alarm mode. To set alarm #1, press the "SELECT," button again and the cursor will be at "OFF,". To turn ON, press the "MODE," button once. Press the "SELECT," button once again, and using the "MODE," button change the hour to the desired time. Press the "SELECT," button once to change the minutes, and using the "MODE," button to change the minutes to the desired number. Repeat for A for AM or P for PM. Once you have completed programming the time, press the "READ," button. For alarm 2 or 3, after accessing alarm function press the "MODE," button once more for alarm #1 and again for alarm #3. Set other alarms the same way. To turn off any alarm, while in that alarm mode. change the "ON," to "OFF,".

## Jet Messages

There are 40 Jet Messages built into the pager. When your friends page you, they can page with any combination of number codes that will appear as word messages on your pager. A total of 4 Jet Messages can be utilized per page (followed by a call back number). Jet Messages cannot be utilized with musical caller ID on the same page.

00 C-U-LATER	28 HAVE LUNCH ?
01 TURN ON CELL	29 HAVE DINNER ?
02 CALL HOME	30 WANNNA GO?EAT
03 CALL HOME	31 WETTING OFF
04 CALL HOME	32 YES WANNNA PHANG ?
05 DO NOT AGREET	33 NO
06 GOOD NIGHT	34 MAY BE
07 HELLO	35 CLUBBING
08 HOW ARE YOU	21 PLAY B-BALL
09 I LOVE YOU	22 PLAY Q-BALL
10 I NEED YOU	23 PLAY CARDS
11 NEED HELP	24 GO BOWLING
12 NEED HELP	25 GO SHOPPING
13 NEED HELP	26 GO SHOPPING
	27 GO SWIMMING

 
## EXAMPLE:

1. Dial the pager number \_\_\_\_\_ and wait for the greeting (or tone).
2. Then press \*08\*09\*17\*15[6265551212] (your call back number).
3. The pager will first display:

HOW ARE YOU, I LOVE YOU, MEET AT CAFE, WAITING 4-U 6265551212

This Jetpage pager comes with 10 Jet Message cards. Give these to your friends and family so they will know how to page you with Jet Messages.

## Battery Information

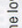1. This pager uses only an AAA Alkaline battery. Do not use a Heavy-duty battery or recharged battery.
2. When low battery shows on the display, the low battery icon  will also display. To remove the old battery, simply charge the battery by sliding the battery door to the right to open. Align the new battery so the positive (+) and negative (-) markings are in proper position, and insert the new battery. Then press the READ;? button to make sure the pager is in usable condition.

Visit our Web site at [www.Jetpage.net](http://www.Jetpage.net)