

If there is one unread message in memory, "CALL" will appear on the display. If there are more than one unread messages in memory, "CALLS" will be displayed.

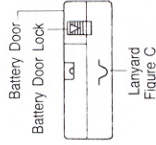


Figure C Battery door
Slide Battery Door in the direction of the Arrow to open.
Battery door lock. To lock Battery Door, slide Battery Door Lock down.

Battery Information:
Your pager is designed to operate with a "AAA" size alkaline battery. We recommend EVEREADY brand batteries #E92 size "AAA". See figure B for battery replacement and polarity information.
Be sure to turn your pager off before removing the battery to ensure the current time is saved in memory.

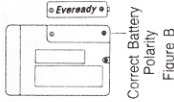


Figure B
Correct Battery Polarity

Other pager features
When the battery is approaching the end of its life, a low battery alert occurs, "LO CELL" appears on the display.
If the number of received message equals the maximum allowable number, "INFO FULL" will appear on the display. When the memory is full, a new incoming message will overwrite the oldest unprotected message.
When your pager receives a call with no message associated, "TONE ONLY" will appear on the display.
If an incomplete or error message is received, "UJ" will appear at the end of message indicating the message is subject to errors.

Press (M) to set the month and flash the dates.
Press (▲) or (▼) to go forward or backward 1 day at a time or press and hold to rapid scroll.
Press (M) to set the date and return your pager to the standby mode.


Selecting Beep, Vibrate and Silent:
From the "standby mode", press (M) and "OFF" will be displayed.
Press (▲) until "BEEP" is displayed.
Press (M) and your pager will display "beep(1,2,3,4)" or "vibrate" or "silent" depending on the current "Alert Mode" setting. Press (▲) or (▼) to select one of the six optional tones, "VIBRATE" or "SILENT".
Press (M) to set and return your pager to the standby mode.

Turning your pager off:
From the "standby mode", press and release (M) and "OFF" will be displayed.
Press and hold (M) again for two seconds until pager beeps.
"OFF" will flash and "GOOD BYE" will scroll off the screen.

p.m. indicator. Press (▲) or (▼) to change from "A" for a.m. and "P" for p.m.
Press (M) to select the a.m./p.m. indicator and return your pager to the standby mode.
Note: A ▲ will appear on the display to designate that the alarm is on.
At the desired time, the alarm will sound and "ALARM" will appear on the display.
Press (▲) or (▼) to stop the audible alert.
If the alarm is turned on, it will beep even if the pager is turned off.

Setting the Clock:
From the "standby mode", press (M) and "OFF" will be displayed.
Press (▲) repeatedly until "TIME" is displayed.
Press (M) to display T-12:00P with the hours flashing.
Press (▲) or (▼) to go forward or backward 1 hour at a time or press and hold to rapid scroll.
Press (M) to set the hour and flash the minutes.
Press (▲) or (▼) to go forward or backward 1 minute at a time, or press and hold to rapid scroll.
Press (M) to set the minutes and flash the a.m./p.m. indicator. Press (▲) or (▼) to change between "A" for a.m. and "P" for p.m.
Press (M) to select the a.m./p.m. indicator and flash the months. Press (▲) or (▼) to go forward or backward 1 month at a time, or press and hold to rapid scroll.

LCD DISPLAY:

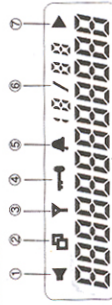

- Alert Mode Indicator:**
The ▲ symbol indicates that the pager is in the "Beep" or audible alert mode.
- Duplicate Message Indicator:**
The symbol indicates the incoming message received is a duplicate of an unprotected message currently in memory.
- Out of Range Indicator:**
The symbol indicates that your pager has not received any paging signals in over 30 minutes (not available on all Paging Systems).
- Saved Message Indicator:**
The symbol indicates that the message is saved in a unique "permanent" memory.
- Alarm Indicator:**
The symbol indicates that the alarm is on and will beep at the designated time.

6. Month/Date Indicator:

The 12/31 means December 31.

7. Continued Message Indicator

The symbol indicates that the received message is longer than 12 characters.

8. 12 Character, 7 Segment Display

The 888888888888 characters are used to display ALL messages.

Manual conventions:

- (M) is the symbol for the Menu button on the side of the pager.
- (▲) is the symbol for the Forward button, the large button on the pager's front.
- (▼) is the symbol for the Reverse button, the smaller button on the pager's front.
- "OFF" quotation marks indicate what is displayed on the LCD display.



Turning Your Pager On:

Press and hold (M) to turn your pager on. Your pager will beep, vibrate, and display your pager's Turn-On-Message. Then your pager will display the time of the day as well as month and date.
Your pager is now in the "standby mode" and ready

display "STORE 1".

Note: If location 1 is currently occupied, "REPLACE 1" will be displayed. Use (▲) or (▼) to scroll through the six memory locations and return to standby option. Press (M) again to store your message or return to standby.

Protected messages are designated by and can not be overwritten by new incoming messages or lost while replacing the battery.
When all six memory locations are full any new message you wish to protect must overwrite one of the current protected messages.

Note: "TONE ONLY" messages cannot be protected.

Clearing Unprotected Messages(Individual):

While viewing a message, press (M) and "HOLD DISPLAY" will be displayed.
Press (▲) to display "CLEAR" and press (M).
"YOU SURE" and "your message" will be alternating. Press (M) to clear the message.

Clearing Unprotected Messages(All):

From the "standby mode", press (M) and "OFF" will be displayed.
Press (▲) repeatedly until "CLEAR ALL" is displayed.
Press and hold (M) longer than two seconds, then "YOU SURE" and "CLEAR ALL" are alternating.
Press (M) again to clear all messages.

Note: If there are any unread message(s), this mode is not available and is not displayed as an option.

Turning the Time Stamp On and Off:

From the "standby mode", press (M) and "OFF" will be displayed.
Press (▲) repeatedly until "STAMP" is displayed.
Press (M) to display "STAMP ON" or "STAMP OFF", and press (▲) or (▼) to change between OFF and ON.

Setting the Alarm:

From the "standby mode", press (M) and "OFF" will be displayed.
Press (▲) repeatedly until "ALARM" is displayed.
Press (M) to display "ALARM ON/OFF" and press (▲) or (▼) to change between off and on.
Press (M) to select "ALARM OFF" and return your pager to the standby mode.
Press (M) to select "ALARM ON" and display AL-12:00P flashing the hours.
Press (▲) or (▼) to go forward or back 1 hour at a time or press and hold to rapid scroll.
Press (M) to set the hour and flash the minutes.
Press (▲) or (▼) to go forward or back 1 minute at a time, or press and hold to rapid scroll.
Press (M) to set the minutes and flash the a.m./