

Jetpage

USER MANUAL

JP650 POCSAG

POCSAG

FEATURES AND FUNCTIONS

- Ultra Compact Size
- 20 Alerts, Silent (Vibration), Beep
- Display Time, Date, and Day of the Week
- Display Numbers of Unread Message(s)
- 18 Message Memory
- Lock up to 10 Messages
- Delete Individual or All Messages
- Message Time Stamping
- Stop Watch
- Duplicate Message Indicator
- 3 Alarm Settings
- Low Battery Indicator
- Service Area Indicator
- Backlight
- Musical Caller ID


1

PAGER SYMBOLS

- ☰ Numbers of Messages Stored
- ☒ Services Area Indicator
- 🔊 Standard Beep
- 🔇 Silent (Vibration)
- 🎵 Music Alert
- 🕒 Alarm Clock
- 🔄 Auto On/Off
- 🔋 Low Battery Indicator
- 🔒 Locked Message
- ✖ Delete Message Indicator
- 🔄 Duplicate Message Indicator
- 📵 Message Full
- ▶ Message Continuation
- 📅 Day of the Week (1=Mon, 2=Tue, 3=Wed, 4=Thu, 5=Fri, 6=Sat, 7=Sun)

2

Operating Your Pager

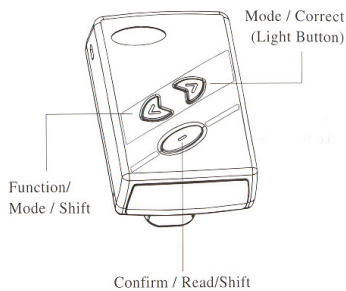

3

STANDBY MODE

Standby mode is the home screen of the pager. It displays the time, date, and day of the week.

TURNING PAGER ON/OFF

From standby screen, press and hold the "<" and ">" key simultaneously until the pager screen read "OFF".

To turn the pager back on, press and hold the ">" key until the pager alerts.

READ MESSAGE

- ① Press any key to stop alert.
- ② Press "-" to read message.
- ③ Press "-" to view the next screen.

4

LOCK / UNLOCK / DELETE INDIVIDUAL MESSAGE

- ① Press "-" to select the message you want to lock, unlock, or delete.
- ② Press "<" to lock, unlock, or delete message.
- ③ Press "-" to confirm your selection.

BACKLIGHT

To turn on or off the backlight press ">"
The backlight will automatically turn off after a couple of seconds.

MODE SETTING

- ① Press "<" until the screen displays "SET MODE".
- ② Press "-" to select "SET MODE".
- ③ Press "<" to select "SILENT" or "AUDIO".
- ④ Press "-" to confirm your selection.

5

SET SOUND (Music setting)

- ① Press "<" until the screen displays "SET SOUND".
- ② Press "-" to select "SET SOUND".
- ③ Press ">" to select alert sound.
- ④ Press "-" to confirm your selection

DELETE ALL MESSAGES

- ① Press "<" until the screen displays "DELETE ALL".
- ② Then press "-" to delete all the unlocked
- ③ messages.

ALARM CLOCK/REMINDER SETTING

Alarm Clock Setting

- ① Press "<" until the screen displays "SET ALARM".
- ② Press "-" to select alarm setting.
- ③ Now the screen should display "8:00A OFF".

6

- ④ Press "<" to choose the 1st or 2nd set of alarm.
- ⑤ Press "-" to confirm your selection.
- ⑥ Press "-" to move the cursor and press "<" to adjust the time and alarm on/off.
- ⑦ Press "-" until standby screen appears.

Reminder Alarm Setting

The reminder alarm (3rd alarm) lets you set a time interval (between 1 minute to 59 minutes) at which the reminder alarm will alert.

- ① According to above ways to choose the 3rd set of alarm.
- ② Press "-" to enter the reminder alarm.
- ③ Press "<" to select how many times the reminder alarm will alert (r0 stands for timeless and r1-r9 stands for 1 time to 9 times) and press "-" to confirm it.
- ④ Press "-" to move the cursor and press "<" to adjust the time and alarm on/off.
- ⑤ Press "-" until standby screen appears.

7

AUTO ON/OFF SETTING

- ① Press "<" until the screen displays "SET AUTO".
- ② Press "-" and the screen will display "AUTO DISABLE"(off).
- ③ Press "<" to select "AUTO ENABLE"(on).
- ④ Press "-" to set time.
- ⑤ Press "<" to adjust the time and press ">" to move cursor.
- ⑥ Press "-" until standby screen appears.

NOTE : This feature will turn your pager on and off according to the time that is set.

Pages will not be received while this feature is in use.

TIME/DATE SETTING

- ① Press "<" until the screen displays "SET TIME".

8

- ② Press "-" to select "SET TIME".
- ③ Press "-" to move the cursor and press "<" to adjust the time.
- ④ Press "-" until standby screen appears.

SETLC MSG (Musical Caller ID)

This feature allows you to know who is paging with an identifying alert.

- ① Press "<" until the screen will displays "SET LC MSG".
- ② Press "-" to select "SET LC MSG". The screen should display "LC1-----".
- ③ Press "<" to select 1st or 2nd LC message
- ④ Press "-" to move the cursor and "<" to change the value of the digits. (the first 9 digit is for the incoming number, and the music you set on the "SET SOUND" mode for the LC1 or LC2 will alert. Press "-" to move cursor backward during the process.
- ⑤ Press "-" until the standby scrfeen appears.

STOP WATCH

- ① Press "<" until the screen displays "STOPWATCH".
- ② Press "-" to select "STOPWATCH".
- ③ Press "<" to start timer.
- ④ Press "<" again to stop timer.