
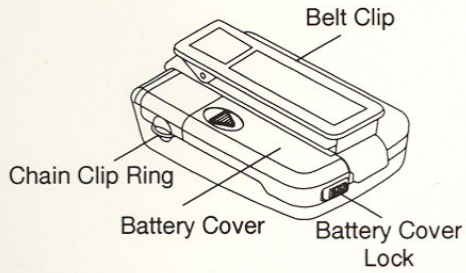


Panasonic Reactor Manual

PAGER OVERVIEW

Alert Speaker

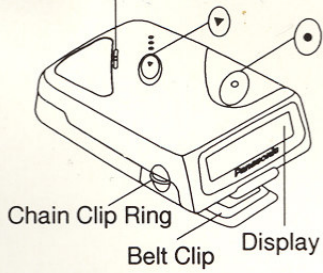

18:88 P

- Time message was received
- Alarm Time
- Automatic Off/On Time
- Message is locked (saved)
- Message(s) can be deleted
- Alarm is set
- Automatic Off/On is set
- Long Period Alert is set
- Alert is set to audible
- Message is a duplicate
- Battery needs replacing
- Message continues on next page.

000000000000

- Message area
- Current time and date are shown on Standby display

CONTENTS

Congratulations on your purchase of the Panasonic Numeric Display EP-2P Pager! Please read this booklet carefully before using your pager.

Pager Overview and Accessories Front cover fold-out

Precautions and Reference Card. Back cover fold-out

Basic Operation

Low Battery Alert	2
Replacing Battery	3
Turning On Pager	4
Turning Off Pager	5
Receiving Messages	6
Reviewing Messages	7
Locking Messages	8
Unlocking Messages	9

Advanced Operation

Setting Alert Type	10
Setting Beep Pattern	11
Setting Long Period Alert (LPA)	12
Setting Alarm	13
Setting Automatic Off/On	15
Deleting One Message	18
Deleting All Messages	19
Setting Time/Date	20

© 1997 by Matsushita Communication Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.


BASIC OPERATION

LOW BATTERY ALERT

When the battery needs to be replaced, an alert tone sounds for eight seconds, or until you press either button.




- **LO-CELL** and all active icons will flash on the display.

The display will continue to show  until the battery is replaced.

NOTE:


- One AAA battery is required.
- Turn off pager before replacing battery.
- Pager memory is maintained during replacement for a short period, but removing the battery for extended periods may cause memory to return to initial settings.
- If you will not be using your pager for at least a month, remove the battery.

REPLACING BATTERY

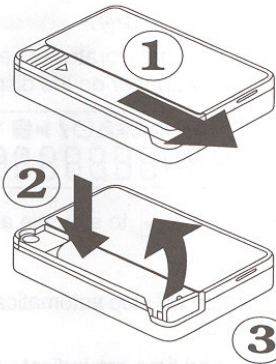

1. Slide battery cover in direction of arrow.
2. Push the negative (-) side of the battery down.
3. The positive (+) side of the battery will come up for easy removal.

TURNING ON PAGER

1. Press and hold .
 - The pager vibrates or beeps, and all icons appear on the display.



2. Press  or  to stop the alert.


or

The alert will stop automatically after five seconds.

3. Date and time are indicated on the standby display.



TURNING OFF PAGER

1. From standby, press and hold  until **OFF** is displayed.



2. Press  to turn off the pager.

RECEIVING MESSAGES

1. Leave the pager on to receive messages.
2. When receiving, the pager vibrates or beeps. Press or to stop the alert.



- Display lights to reveal message. The time and date the message was received is displayed.
 - **A** means a.m.; **P** means p.m.
 - indicates message continues on next screen.
 - A received message remains on the display until you press either button.
3. Press to view next screen (or press to return to standby).
 - If the message is not continued on a second screen, pressing either button returns the pager to standby.
 4. When you have viewed the second screen, press or to return to standby.
 - If neither button is pressed, display will return to standby after 16 seconds.


REVIEWING MESSAGES

(Press and hold from standby to light display.)

1. From standby, press .



- The most recent message is displayed. The time and date the message was received alternate on the display.
2. Press to view next message.
 3. After reviewing all messages, the display indicates the percentage of memory used for messages.

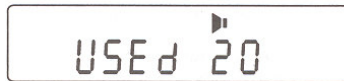

4. If pager has no messages:



5. Press or to return to standby.
or
Display will return to standby after 16 seconds.

LOCKING MESSAGES

Your pager can hold up to 23 messages in temporary memory. If memory is full, the oldest message is deleted when a new message is received. To avoid losing a message, you can lock up to eight messages.

1. With the message displayed, press .



- and message will flash.
2. Press to lock the message.
 - will be displayed when locked, and message will stop flashing.
 3. If **FULL** is displayed, eight messages are already locked.
 - In this case, unlock an old message before locking a new one.

Note:

Locked messages will remain locked for 31 days.

UNLOCKING MESSAGES

1. With locked message displayed, press .



- will flash.
2. Press to unlock message.



- will disappear.

Note:

Locked messages will automatically be unlocked after 31 days.

ADVANCED OPERATION

SETTING ALERT TYPE

- From standby, press until **SET ALERT** or **SET VIBRATE** is displayed.
 - If the pager is set to beep when a message is received, **SET VIBRATE** is shown on the display.
 - If the pager is set to vibrate when a message is received, **SET ALERT** is shown on the display.
- Press to change current alert and save to new setting.
- Display will return to standby.



- is displayed on standby if pager is set for beep.

SETTING BEEP PATTERN

(This feature is displayed only when alert is set to beep. See page 10 to set alert.)

- From standby, press until **SET BEEP** is displayed.
- Press to display beep setting and to hear a sample beep tone.



- Press to review available settings and tones.
 - There are four tone patterns to select from.
- When the desired setting sounds, press to save and return to standby.

SETTING LONG PERIOD ALERT (LPA)

When this feature is set and a page is received, an initial two-second alert will sound, followed by a shorter alert every minute for up to 12 hours, or until or is pressed.

- From standby, press until **LPA On** or **LPA OFF** is displayed.
- Press to change current setting and to save new setting.

Display will return to standby.



- ! will be displayed if LPA is on.

Note:

A received message remains on the display until you press either button to stop the alert.

SETTING ALARM

- From standby, press until **AL On** is displayed.



- The alarm icon will flash.

- Press .



- Hour digits and **A** or **P** will flash.
- Press to set the hour.

- Press and the minutes will flash.
 - Press to set the minutes.

- Press and new alarm time will flash.
- If setting is correct, press to save and return to standby.

or

Press to return to the hour setting.

or

Display will return to original standby setting after 16 seconds.

Note:

Press and hold to change figures quickly.

Turning Alarm Off

1. Press until **AL OFF** is displayed.
2. Press .



- and **OFF** will flash.
 - To cancel and return to previous display, press .
3. Press to turn alarm off and return to standby.



- and setting time disappear from display.

or

Display will return to standby after 16 seconds with the alarm still on.

SETTING AUTOMATIC OFF/ON

(Automatic ON will function only when pager is turned off using automatic OFF feature.)

1. From standby, press until **AUTO On** is displayed.
2. Press to set **OFF** time.



- Hour digit(s) and **A** or **P** flash.
 - Press to set the hour.
3. Press and minutes flash.
 4. Press to set automatic **ON** time.



- Hour digit(s) and **A** or **P** flash.
 - Press to set the hour.
5. Press and minutes flash.
 - Press to set minutes.

6. Press to confirm your setting.
 - If correct time is displayed, press to save.



- **OFF** time will be displayed to the left and **ON** time will be to the right.
7. Press or to return to standby, or display will return to standby after three seconds.
 - **OFF** time will appear at upper left.
 - If the alarm is also set, **OFF** time will be displayed preferentially.
 8. When **OFF** time arrives, pager turns off, and **ON** time is displayed.



9. When **ON** time arrives, pager turns on.



- **OFF** time is displayed at upper left.

Note:

If the alarm is set during the pager's **OFF** time, the alarm will not go off.

Turning Off Automatic Off/On

1. From standby, press until **AUTO OFF** is displayed.
2. Press .



- and **OFF** flash.
3. Press to turn feature off and return to standby.



or

Display will return to standby after 16 seconds.

DELETING ONE MESSAGE

1. With message displayed, press  twice.



-  and message flash.
2. Press  to delete message; the next message will be displayed.

or

Press  to cancel and return to step 1.


or


Display will return to standby after 16 seconds.









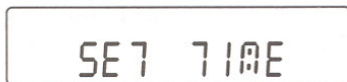

Note:

Locked messages also can be deleted.

SETTING TIME/DATE

1. From standby, press  until **SET TIME** is displayed.




2. Press ; the month flashes.
 - Press  to set the month.
3. Press ; the date flashes.
 - Press  to set the date.
4. Press ; the hour flashes.
 - Press  to set the hour.
5. Press ; the minutes flash.
 - Press  to set the minutes.
6. Press ; your setting will flash.
7. Press  to save and return to standby.

or



Display will return to standby in 60 seconds.

DELETING ALL MESSAGES

(This feature will be skipped if no messages are stored.)

1. From standby, press  until **dDELETE ALL** is displayed.
2. Press .



-  and **dDELETE ALL** flash.
3. Press  to delete all messages and return to standby.

or

Press  to cancel and return to step 1.

or

Display will return to standby after 16 seconds.

Note:

All messages except locked ones will be deleted when using this feature.

PRECAUTIONS:

- Avoid extreme temperatures. Operating temperature is from 14°F to 131°F (-10°C to 55°C).
- In extremely cold conditions (i.e., below 32°F or 0°C), it may be difficult to see the display characters.
- Do not expose your pager to excessive sunlight, liquids, high humidity, or dusty conditions.
- Do not drop or strike your pager.
- Use a soft cloth moistened with mild soap to clean your pager. Do not use petroleum-based cleaners or similar-type chemicals such as benzine or thinner.
- Remove the battery when your pager will not be used for more than one (1) month.

FCC WARNING: To assure continued FCC emission limit compliance, the user shall not make any unauthorized changes or modifications to this equipment. Failure to follow these instructions voids the user's authority to operate this device.

This device complies with Part 15 of FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.